

## Air Filter or Air Filter Screen

### Instructions for use

1. Remove the Blower Filter Housing fitting on the intake side of the blower.
2. Remove the old air filter. If replacing the air filter screen, remove it and place new screen in blower in the exact same orientation as old screen.
3. Place new air filter against screen.
4. Slide Blower Filter Housing fitting back over the blower and secure with a tie strap.